


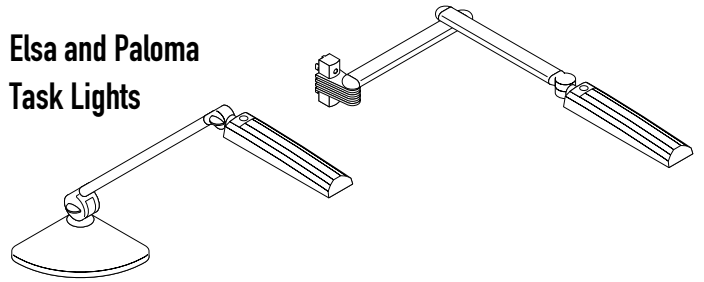

Installation Instructions

004413D Rev A

Elsa and Paloma Task Lights



1

To remove lens: Insert screwdriver between head housing and lens (at tabs), gently press the head housing outward at tab. Pry out lens.

Insert bulb and snap into clasps.

To replace lens: Insert one side of lens (raised surface out) into tabs. Gently snap other side into tabs.

2 For Elsa:

Remove plastic plug.

Insert lamp and tighten screw.

3 For C-Clamp Mount:

A

B

4 For Slatwall Mount:

5 For Panel Mount:


Loosen screws on bracket.

Insert bracket into panel and push downward. Tighten screws.

Insert lamp into mounting.

Note: Corner application is not available with universal mounting bracket.

6 Important Safety Instructions: Use only a Waldmann ballast. This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

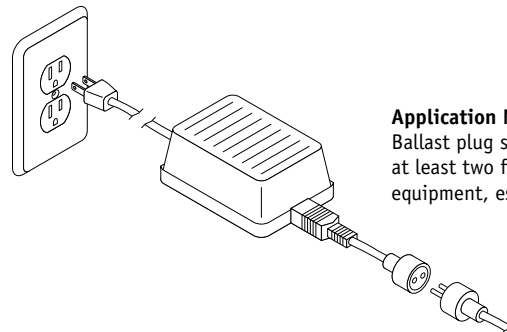

Application Note: Ballast plug should be situated at least two feet from any electronic equipment, especially computer monitors.

For a better day at work.™

details®

A STEELCASE COMPANY

www.details-worktools.com
 Details Customer Alliance 800.833.0411
 All rights reserved. Printed in U.S.A. 2/06