




004679D Rev B

Page 1 of 2

Installation Instructions


FYI Single Monitor Arm

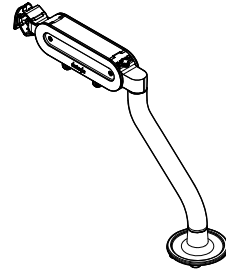


FYI Single Monitor Arm

FPASINGLECC
FPASINGLETM

 
Tools:
(Not all tools required for each mounting option)



5/32" Allen Wrench

 


1/4" Allen Wrench

 


1/16" Allen Wrench



 5/16" Wrench




#2 Phillips Screwdriver

 

11/32" Drill Bit



Power Drill

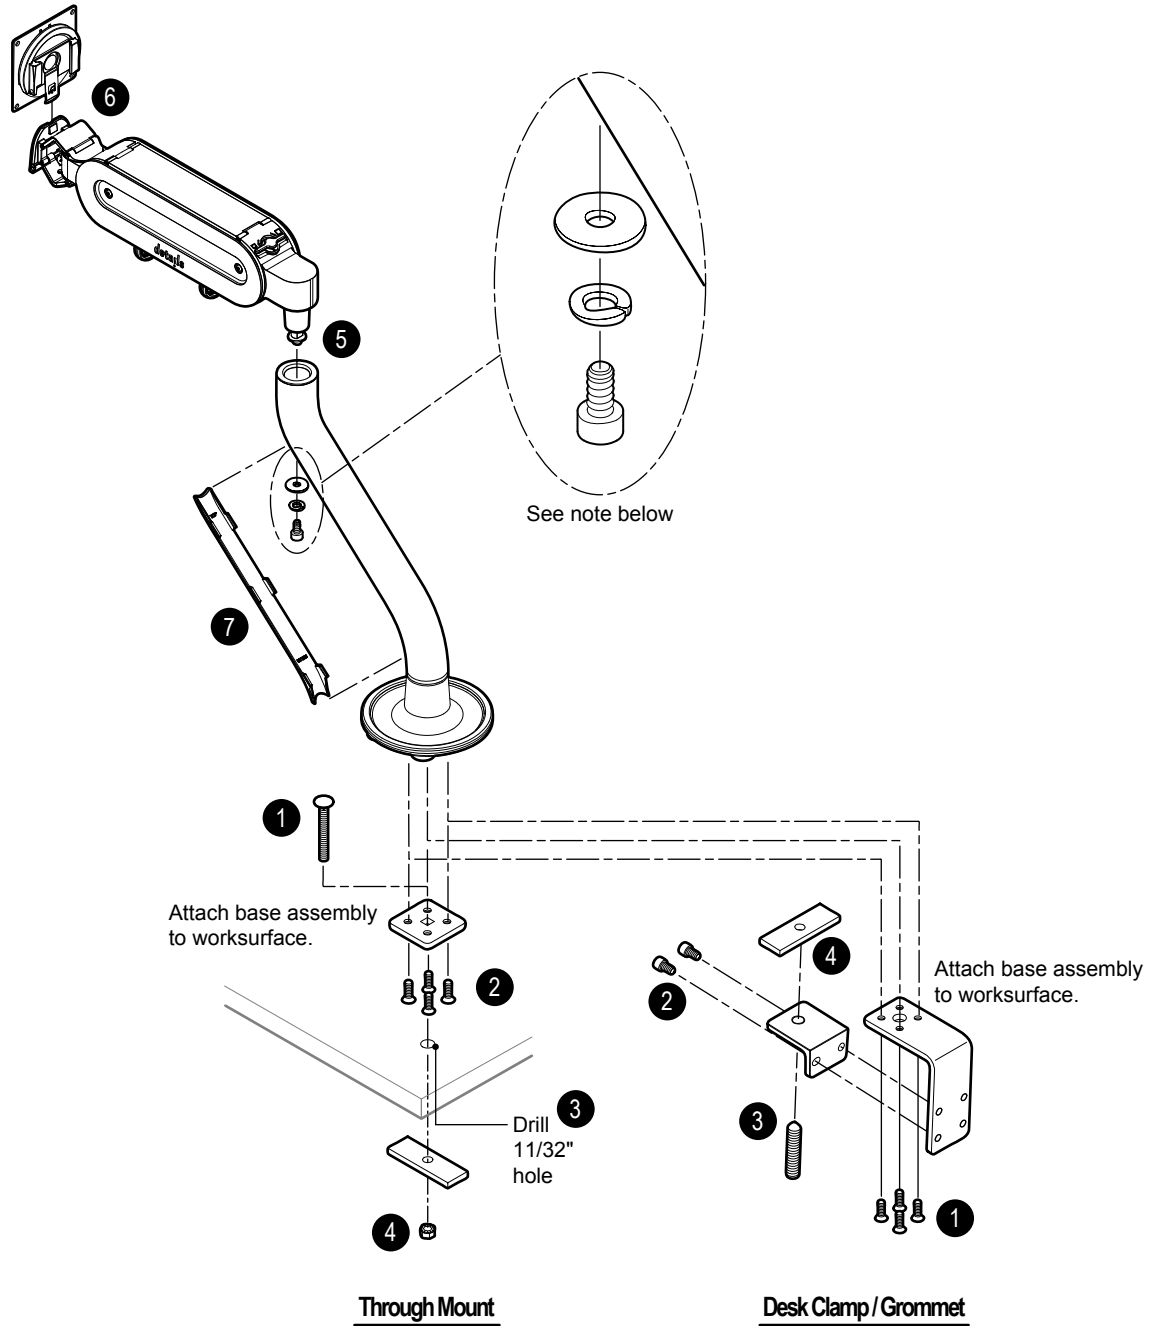

Note: Located in Monitor Arm Hardware Pack.



For a better day at work.™

details®

A STEELCASE COMPANY

www.details-worktools.com
Details Customer Alliance 800.833.0411
All rights reserved. Printed in U.S.A. 2/06




Installation Instructions

FYI Single Monitor Arm

004679D Rev B


Page 2 of 2

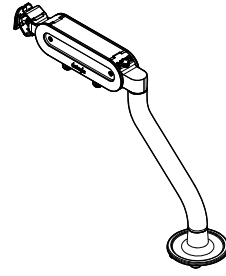


FYI Single Monitor Arm

FPASINGLECC
FPASINGLETM


- 1** Attach 75mm or 100mm VESA Bracket to backside of monitor.

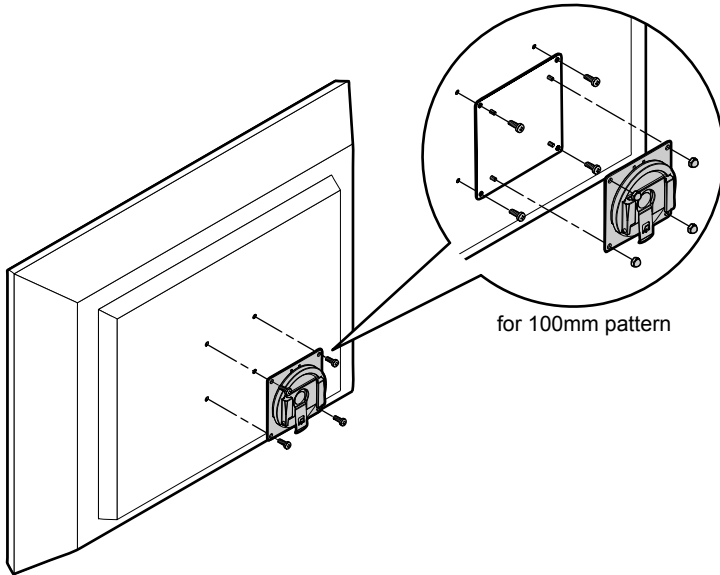

- 2** Slide monitor mount assembly onto end of arm until audible "click" is heard. Tighten set screw to prevent removal of monitor.

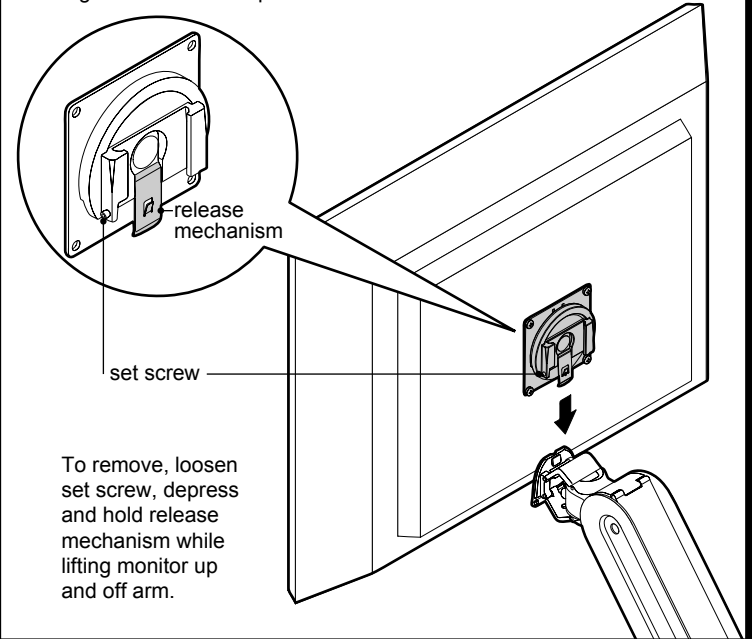


- 3** Gently pry off cable cover on the bottom of the arm. Insert cables into arm cavity and through two loops under the arm. Press cover back into place.

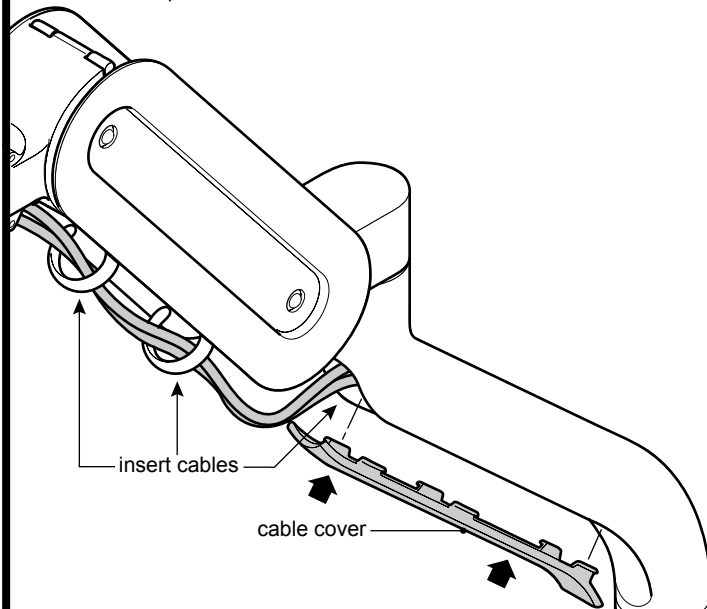

- 4** Adjust T-handle to accommodate weight of monitor. The monitor should "float" (neither rise nor fall when the counterbalance is properly adjusted).

- If monitor **sinks** when installed, pull up the T-handle and turn **clockwise** until monitor "floats".
- If monitor **rises** when installed, pull up the T-handle and turn **counter-clockwise** until monitor "floats".

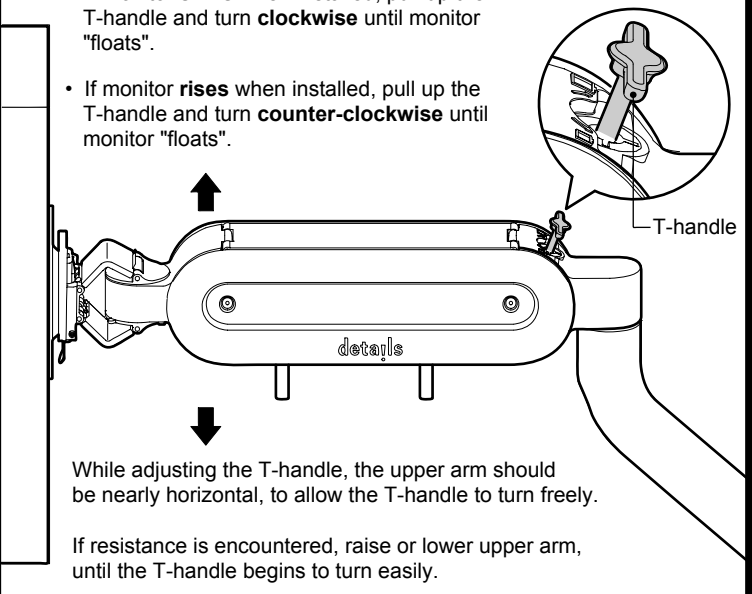

For a better day at work.™

details®

A STEELCASE COMPANY

www.details-worktools.com
Details Customer Alliance 800.833.0411
All rights reserved. Printed in U.S.A. 2/06