

The Walkstation

Care & Maintenance



details®

Treadbelt Adjustment:

Your treadmill's running belt has been properly aligned at the factory. However, when the treadmill is used on an uneven surface, please follow these instructions:

- 1** Stand beside the treadmill, place the Magnetic Safety Clip onto the display console & follow operating instructions for running the treadmill at 2 mph.
- 2** If the belt is off-center to the right, turn the left roller adjustment bolt counter clock-wise $\frac{1}{4}$ turn. If the belt is off-center to the left, turn the left roller adjustment bolt $\frac{1}{4}$ turn clockwise.
- 3** Let the machine run for several minutes to check the alignment. (Belt alignment does not need to be perfect.) If more correction is needed, turn the adjustment bolt $\frac{1}{4}$ turn and check again.

Treadbelt Tension:

Turn both rear roller adjustment bolts counter-clockwise until Treadbelt just begins slipping when walking on it, then turn both rear roller adjustment bolts clockwise in equal quarter turn increments until the Treadbelt stops slipping.

Note: Be sure to walk on Treadbelt to ensure that the Treadbelt does not slip while under load.

Treadmill Calibration:

- 1** Hold down ENTER and STOP while applying magnetic safety clip to magnet on keypad. Unit will say CALIBRATION.
- 2** Press START. Machine will speed up, say WAIT and then say SUCCESSFUL.
- 3** Remove Magnetic Safety Clip and reapply then use as normal.

Maintaining your Treadmill:

Your treadmill is constructed of quality materials and manufactured to provide many years of faithful service. Simple routine cleaning and a preventive maintenance program will extend the life of your treadmill.




To prevent electrical shock, be certain the treadmill is turned off and unplugged from the electrical outlet before performing any cleaning or routine maintenance.

Treadbelt Lubrication: For average use of your treadmill, we recommend you lubricate under the Treadbelt once per year. For heavy use, which is more than 10 hours per week, we recommend that you lubricate every six months.


Note: Details recommends using only Details-provided liquid silicone lubricant, part number 005723DSR, available from your local Details dealer.

Lubrication Instructions:

- 1** Lift the edge of the wide black Treadbelt off the flat surface underneath, with the help of a butter knife or a small putty knife. Be sure to avoid damaging the Treadbelt.
- 2** Once lifted, place one hand fully under the Treadbelt, and lift with enough pressure to create clearance between the belt and the surface below. Start as close to the motor housing (front of treadmill) as possible.
- 3** With the lubricant (Details part number 005723DSR), draw a straight line out from the centerline of the treadmill, on the flat surface underneath the Tread belt, straight out to the edge.
- 4** Move to the other side of the treadmill, and repeat steps 1-3.

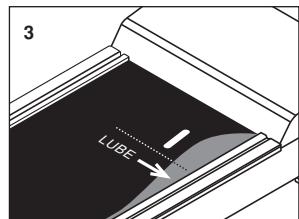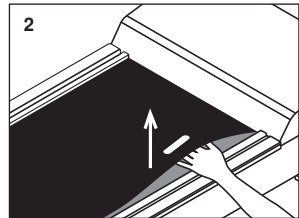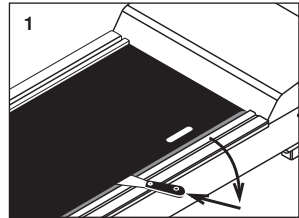

5 There should now be a continuous bead of lubricant on the flat surface under the Treadbelt, all the way across the width of the area where the Treadbelt makes contact. This should consume one full tube of lubricant.

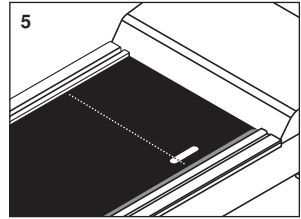

6 Now, turn on the treadmill and walk on it for several minutes. The action of the belt moving will smear the lubricant over the contact surface and the belt. Please note that it may take a couple of days of normal use for the large belt to become fully lubricated. Repeat the lubrication process as required.

Care and Cleaning Instructions for your Treadmill:

Important: Do not clean or wipe under the walking belt.

Daily: Wipe moisture from the control console and treadmill surfaces if needed.

Weekly: You should wipe down your treadmill once a week with a water dampened, soft cloth. Be careful not to get excessive moisture between the edge of the overlay panel and the console, as this might create an electrical hazard or cause the electronics to fail.

Monthly: Clean dust and dirt that might accumulate under and behind your treadmill once a month. Small rubber particles from the soles of walking shoes will accumulate alongside the belt and also behind the unit.

Every Six Months: If the Walkstation is being used on a very thick, plush carpet, dust and fibers may accumulate inside the motor compartment at the front of the treadmill. Consider an underlayment under the treadmill so that it is not sitting directly on the carpet, or else have qualified service personnel vacuum out the motor compartment.

Expert Service: Expert service and maintenance at a reasonable cost are available through your factory-trained, authorized dealer. The dealer maintains a stock of repair and replacement parts and has the technical knowledge to meet your service needs. Contact your local Steelcase dealer for service.



W A R N I N G



Due to the risk of electric shock,
the motor compartment should only be opened by qualified
service personnel.

Maintaining the Height-Adjustable Table:

Regularly clean dust and dirt from the lifting columns. To insure all surfaces are thoroughly cleaned, make sure the lifting columns are fully telescoped to their maximum height. Also, be sure to inspect for damage. Check the connections, cables and plugs for both correct function and secure mounting.

Caution: A damp cloth is recommended. To protect the painted surfaces, use a cleanser that is pH neutral.

Note: Please do not move your table on your own. Guidelines have been set-up on how to move each table and are incorporated in the installation instructions. Contact your Facilities group for assistance.

Care & Cleaning Instructions for Urethane High Profile Edge:

Urethane High Profile edges are generally stain resistant to most compounds or staining agents found in the office, food and health care industries. Most food condiments such as ketchup, mustard, steak sauce, etc. will clean up easily. However, bacteriostatic agents such as iodine and betadine have the greatest staining potential and care should be exercised to avoid exposing this product to these as such stains can usually be only partially removed.

When cleaning, avoid using harsh cleaners with abrasive additives. Never attempt to use sharp metal objects or sandpaper to remove stains. Do not use bleach to clean the edge. Do not use hard bristle brushes. All of these will cause permanent damage to the edge and/or laminate surface and will void the warranty.

We recommend the following cleaning practices be used to help maintain the appearance of this product. Ordinary soiled edges caused by normal use can be cleaned with a damp cloth or sponge and *Clorox® Clean-Up® Cleaner with Bleach* or *Formula 409®*. For stains, if a scrub brush is used, make sure it is a soft bristle type to prevent scratching. Successive cleanings may be required using a soft bristle brush and 70% isopropyl alcohol.



Work.
Make it a moving experience.

For further information, please go to the Details website
details-worktools.com or call 800.833.0411

P.O. Box 1967 / CD-5E Grand Rapids, MI 49501-1967 www.details-worktools.com

©2009 Steelcase Inc. All rights reserved. 12/09

Details Part No. 939500522 Rev. A

details-worktools.com

For a better day at work.™

details

A Steelcase Company