

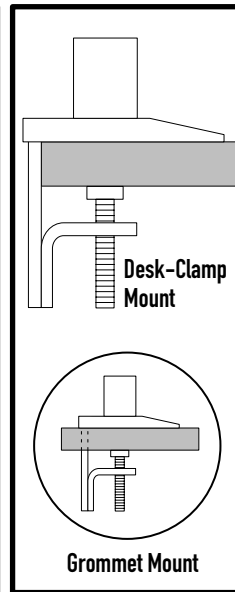
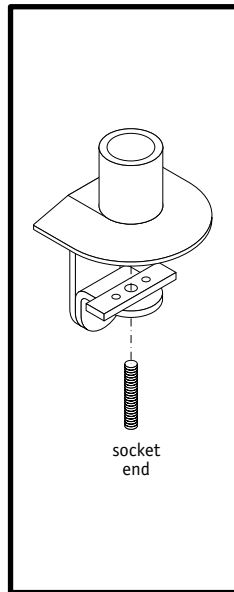


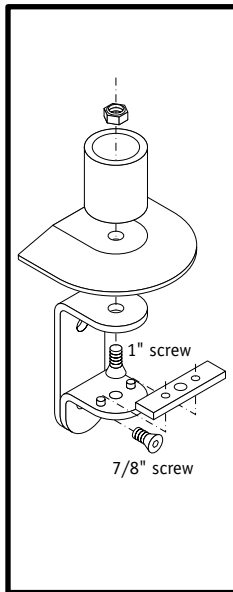

Installation Instructions

Desk-Clamp /
Grommet
Mount Flat Panel
Arm Bracket
CFSPC

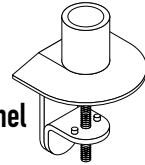

For a better day at work.™

details®

A STEELCASE COMPANY

www.details-worktools.com

P.O. Box 1967 Grand Rapids, MI 49501-1967

All rights reserved. Printed in U.S.A. 1/05

- 1 Drop the nylon stop nut into the impression on the inside of the metal mount column. The rounded top of nut should be facing up.
- 2 Align the metal mount column over the mount plate. Align the short end of the large "L" bracket with the bottom of the mount plate.
- 3 Screw the three parts together by inserting the 3/8"-16 x 1" long flat head socket cap screw up through the bottom of the large "L" bracket, through the counter sunk hole. Insert the short end of the 7/32" Allen wrench into the flat head screw. Hold the mount column in one hand and the long end of the Allen wrench in the other. Tighten enough so the nylon stop nut engages securely and the mount column does not rotate.
NOTE: Grommet assembly slips into opening at this time.
- 4 Secure the small "L" bracket to the large "L" bracket using the black 3/8"-16 x 7/8" long flat head socket cap screw. Attach spacer.
- 5 Insert the black 1/2"-13 x 3" long socket set screw into the other end of the small "L" bracket. Be sure socket end is down.
- 6 Fit the entire mount over the edge of the worksurface, hold the metal spacer in place and tighten it against the bottom of your worksurface.