





## Installation Instructions

Wall / Reverse  
Mount Flat  
Panel Arm  
Bracket  
CFSPWM

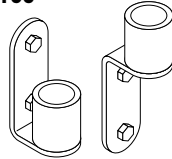


### Wall Mount

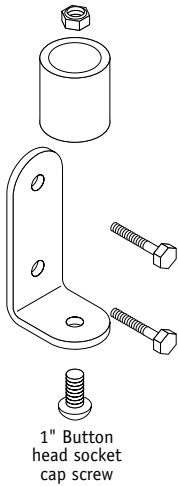

1" Button  
head socket  
cap screw

### Reverse Wall Mount

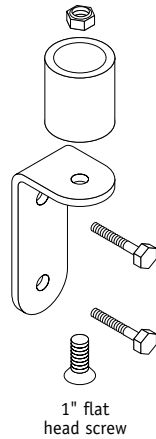

1" flat  
head screw

- 1 Secure the large "L" bracket to a secure stud in your wall using 1/4" x 2 1/2" wood screws. (Wood screws are not provided.)
- 2 Drop the nylon stop nut into the impression on the inside of the metal mount column. The rounded top of nut should be facing up.
- 3 Align the metal mount column over the short end of the large "L" bracket so you can screw the two parts together.
- 4 Screw the two parts together by inserting the 3/8"-16 x 1" Button head socket cap screw up through the bottom of the large "L" bracket, through the hole.

Insert the short end of the 7/32" Allen wrench into the head of the button head screw. Hold the mount column in one hand and the long end of the Allen wrench in the other. Tighten enough so the nylon stop nut engages securely and the mount column does not rotate.

**NOTE:** In the Reverse Wall Mount Installation, use the 3/8"-16 x 1" long flat head screw.

For a better day at work.™

**details**®

A STEELCASE COMPANY

[www.details-worktools.com](http://www.details-worktools.com)

P.O. Box 1967 Grand Rapids, MI 49501-1967

All rights reserved. Printed in U.S.A. 1/05