

# Universal Clamp Assemblies

Installation Instructions 005551D Rev D


ACXX ACMXX ACPMPXX  
 AMXX ACPXX  
 APXX AMPXX

**1** Clamp components to be installed between the clamp buckle and clamp body using 5/16-18 x 1" socket screw provided (use a 5/16-18 x 3/4" screw if installing only cableway). Components should be arranged as follows (disregard components not ordered):

- Clamp Buckle
- Privacy Screen
- Screen Gasket
- Modesty Screen
- Cableway
- Clamp Body
- Socket Screw

**2** Install clamp body fully onto worksurface. Tighten set screw onto mounting plate on underside of worksurface. Do not use set screw without mounting plate or you will risk damage to the underside of the worksurface.

**NOTE:** Tighten set screw until snug. DO NOT overtighten. Torque not to exceed 50 in/lbs.

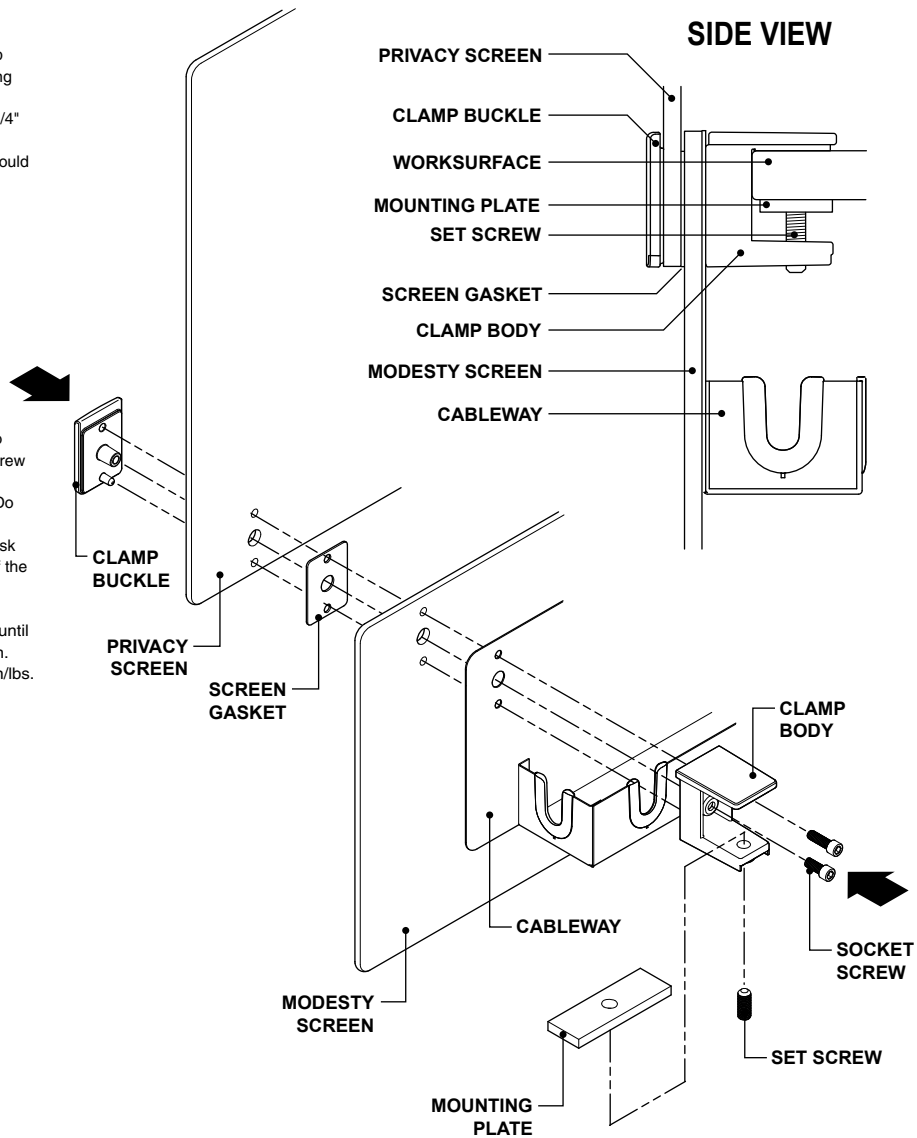

For further information, please go to the Details website [details-worktools.com](http://details-worktools.com) or call 800.833.0411

P.O. Box 1967 / CD-5E Grand Rapids, MI 49501-1967

©2009 Steelcase Inc. All rights reserved. 10/10