




156658 Rev B

Installation Instructions


Needed for installation:

- Power drill
- 1/8" drill bit
- Phillips head bit

Processor Sling
CPRSL

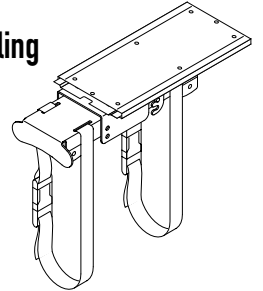


1 Pre-drill holes with 1/8" drill bit. Attach track.

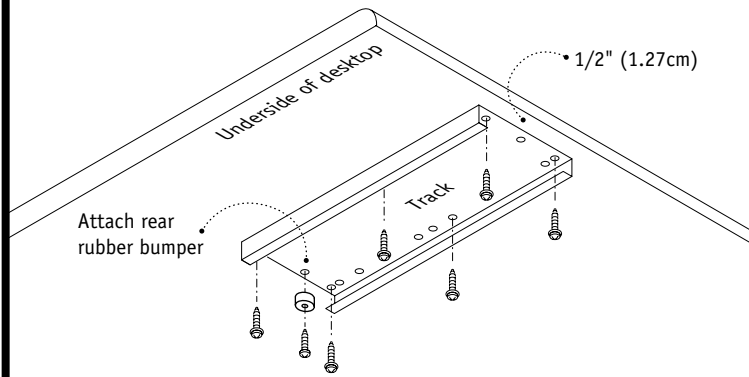


2

a Insert processor. Snap buckles together.

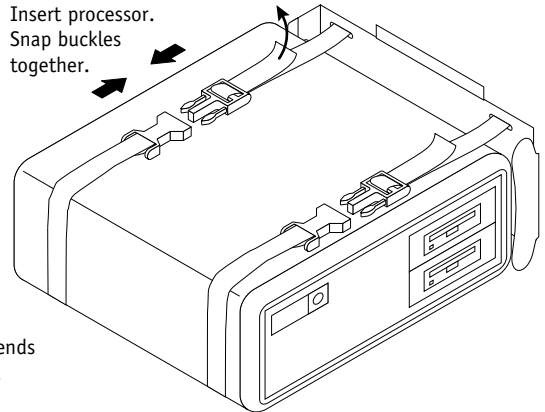


b Pull strap ends to tighten.

3 Slide Processor Sling into track.

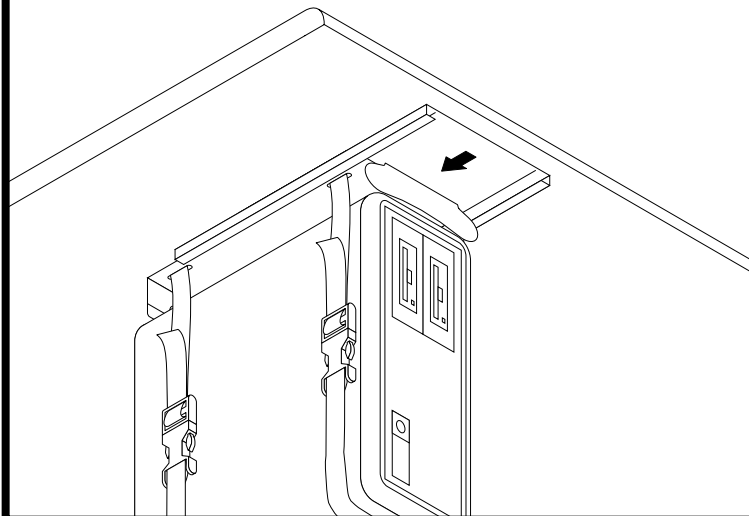

4 Pre-drill holes. Attach front cap.

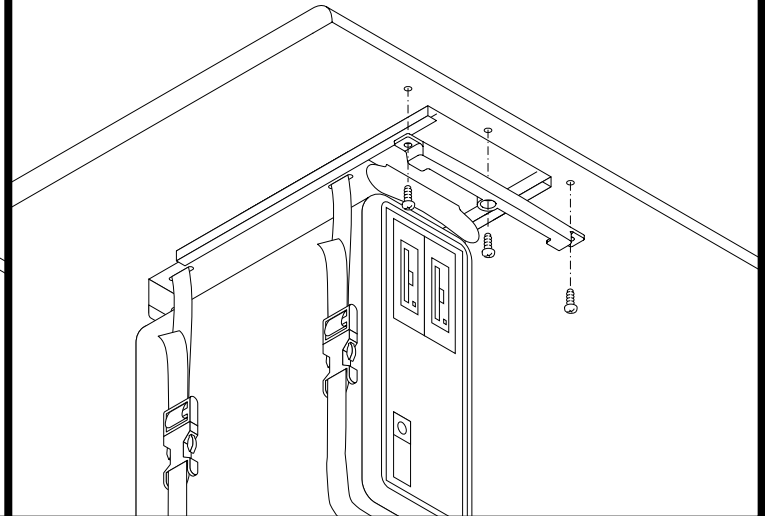

For a better day at work.™

details®

A STEELCASE COMPANY

www.details-worktools.com
P.O. Box 1967 Grand Rapids, MI 49501-1967
All rights reserved. Printed in U.S.A. 1/05